

OIL CHECK PROCEDURE DURING AN OUTAGE FOR GE

RICHMOND AREA

804 – 359 - 3275



CHARLOTTESVILLE AREA

434 – 975 - 3275

NEVER SHUT OFF GENERATOR UNDER LOAD NEVER RESTART GENERATOR UNDER LOAD



LIFT THE LID BY PUSHING DOWN ON THE LID COMPRESSING THE RUBBER GASKET WHILE UNLOCKING THE KEY. TAKE THE ELECTRICAL LOAD OFF THE GENERATOR BY SHUTTING OFF THE BREAKER. PULL THE DOUBLE POLE BREAKER BACK TOWARDS YOU, AND THE FRONT OF YOUR NEVER DARK GENERATOR.



SHUT YOUR NEVER DARK GENERATOR OFF BY PRESSING THE OFF SWITCH. THIS MAY BE PUSH BUTTON OR A ROCKER SWITCH DEPENDING ON YOUR MODEL.



WAIT 2 MINUTES THEN REMOVE DIP STICK. (YELLOW HANDLE) WIPE OFF WITH CLEAN PAPER TOWEL. RE-INSERT DIPSTICK AND CHECK OIL LEVEL. **(LOOK VERY CLOSELY OIL MAY BE VERY CLEAN AND HARD TO SEE)** IF OIL IS NEEDED ADD ONLY APPROXIMATELY AN EIGHTH OF A QUART OF SYNTHITIC 10W30. WAIT 2 MINUTES TO ALLOW OIL TO DRAIN TO THE BOTTOM OF ENGINE AND CHECK AGAIN. IF MORE OIL IS NEEDED ADD

ONLY APPROXIMATELY AN EIGHTH OF A QUART AND WAIT 2 MINUTES AGAIN AND CHECK OIL LEVEL AGAIN REPEAT THIS 2 MINUTE PROCESS AS NEEDED **(DO NOT OVERFILL YOUR NEVER DARK GENERATOR)**

RESTART GENERATOR BY PLACING SWITCH TO THE AUTO POSITION, LET RUN 1 MINUTE, PUT THE BREAKER IN THE ON POSITION (AWAY FROM YOU TOWARDS THE BACK OF THE GENERATOR.) **IF GENERATOR IS LEFT OFF FOR AN EXTENDED TIME NEVER PUT BREAKER BACK IN THE ON POSITION WITHOUT THE GENERATOR RUNNING DURING AN OUTAGE.**