

OIL CHECK PROCEDURE DURING AN OUTAGE **GENERAC**

RICHMOND AREA

804 – 359 - 3275



CHARLOTTESVILLE AREA

434 – 975 - 3275

NEVER SHUT OFF GENERATOR UNDER LOAD **NEVER RESTART GENERATOR UNDER LOAD**



TAKE THE ELECTRICAL LOAD OFF THE NEVER DARK GENERATOR BY SHUTTING OFF THE BREAKER UNDER THE GRAY DOOR ON THE RIGHT. PUSH THE DOUBLE POLE BREAKER AWAY FROM YOU TO THE BACK OF YOUR NEVER DARK GENERATOR



LIFT THE TOP LID OF THE GENERATOR PUSHING DOWN ON THE CORNER OF THE LID WHILE UNLOCKING (RUBBER GASKET MUST BE DEPRESSED TO EASE THE LOCKING AND UNLOCKING OF LID) SHUT GENERATOR OFF BY PRESSING THE OFF SWITCH. THIS MAY BE PUSH BUTTON OR A ROCKER SWITCH DEPENDING ON MODEL



WAIT 2 MINUTES THEN REMOVE DIP STICK. WIPE OFF WITH CLEAN PAPER TOWEL. RE-INSERT DIPSTICK AND CHECK OIL LEVEL. **(LOOK VERY CLOSELY OIL MAY BE VERY CLEAN AND HARD TO SEE)** IF OIL IS NEEDED ADD ONLY APPROXIMATELY AN EIGHTH OF A QUART OF SYNTHETIC 10W30. WAIT 2 MINUTES TO ALLOW OIL TO DRAIN TO THE BOTTOM OF ENGINE AND CHECK AGAIN. IF MORE OIL IS NEEDED ADD ONLY APPROXIMATELY AN

EIGHTH OF A QUART AND WAIT 2 MINUTES AGAIN AND CHECK OIL LEVEL AGAIN REPEAT THIS 2 MINUTE PROCESS AS NEEDED **(DO NOT OVERFILL YOUR NEVER DARK GENERATOR).**

RESTART GENERATOR PLACING SWITCH TO THE AUTO POSITION, LET RUN 1 MINUTE, PUT THE BREAKER IN THE ON POSITION (BACK TOWARDS YOU TOWARD THE FRONT OF THE GENERATOR.) **IF GENERATOR IS LEFT OFF FOR AN EXTENDED TIME NEVER PUT BREAKER BACK IN THE ON POSITION WITHOUT THE GENERATOR RUNNING DURING AN OUTAGE.**