

OIL CHECK PROCEDURE DURING AN OUTAGE **OLD GENERAC**

RICHMOND AREA

804 – 359 - 3275



CHARLOTTESVILLE AREA

434 – 975 - 3275

NEVER SHUT OFF GENERATOR UNDER LOAD **NEVER RESTART GENERATOR UNDER LOAD**



LIFT THE TOP LID OF THE GENERATOR PUSHING DOWN ON THE LID WHILE UNLOCKING (RUBBER GASKET MUST BE DEPRESSED TO HELP EASE THE LOCKING AND UNLOCKING OF LID) TAKE THE ELECTRICAL LOAD OFF BY PULLING BREAKER TOWARDS YOU AND THE FRONT OF THE NEVER DARK GENERATOR.



SHUT THE NEVER DARK GENERATOR OFF BY PRESSING THE ROCKER SWITCH TO THE OFF POSITION.



WAIT 2 MINUTES THEN REMOVE DIP STICK. WIPE OFF WITH CLEAN PAPER TOWEL. RE-INSERT DIPSTICK AND CHECK OIL LEVEL. **(LOOK VERY CLOSELY OIL MAY BE VERY CLEAN AND HARD TO SEE)** IF OIL IS NEEDED ADD ONLY APPROXIMATELY AN EIGHTH OF A QUART OF SYNTHETIC 10W30. WAIT 2 MINUTES TO ALLOW OIL TO DRAIN TO THE BOTTOM OF ENGINE AND CHECK AGAIN. IF MORE OIL IS NEEDED ADD ONLY

APPROXIMATELY AN EIGHTH OF A QUART AND WAIT 2 MINUTES AGAIN AND CHECK OIL LEVEL AGAIN REPEAT THIS 2 MINUTE PROCESS AS NEEDED **(DO NOT OVERFILL YOUR NEVER DARK GENERATOR)**

RESTART GENERATOR BY PLACING SWITCH TO THE AUTO POSITION, LET RUN 1 MINUTE, PUT THE BREAKER IN THE ON POSITION (AWAY FROM YOU TOWARDS THE BACK OF THE GENERATOR.) **IF GENERATOR IS LEFT OFF FOR AN EXTENDED TIME NEVER PUT BREAKER BACK IN THE ON POSITION WITHOUT THE GENERATOR RUNNING DURING AN OUTAGE.**

